



SUZUKI LT250R

1987-1992

CONTROL ARM INSTALLATION

BUSHING-MOUNTED KIT



LOWER-ARM DECALS FACE FORWARD

UPPER ARM: LONGER, STRAIGHTER LEG FORWARD


DELRIN FRAME BUSHINGS WITH MATCHED STEEL SLEEVES

Fullflight product photograph supplied by Fullflight for this revision. Review draft pending model-specific hardware/torque verification.

SUZUKI LT250R 1987-1992

01 / Identify the kit and orientation

Match the arm set and spindle package before removing the factory suspension.

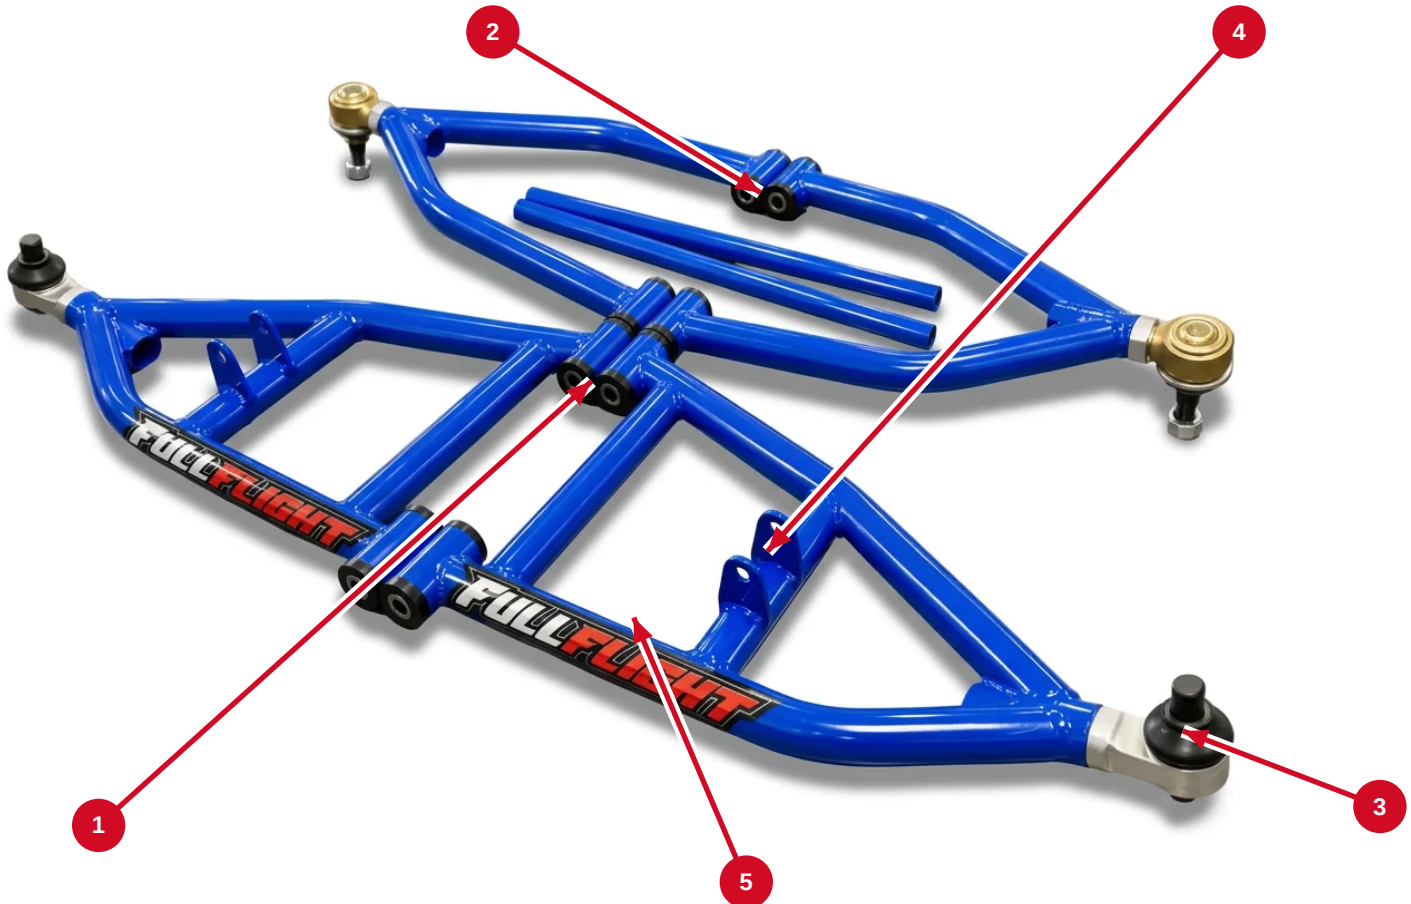

1 / 2 Frame-pivot bushings and steel sleeves

3 Lower ball-joint connection - factory retaining bolt not pictured

4 Lower-arm shock mounting ears

5 Lower-arm decals face forward

Upper-arm direction: the longer, straighter leg faces the front of the ATV. The loose-parts photo does not establish installed left/right orientation.

Save the factory lower-arm ball-joint retaining bolts. Reuse them to retain the lower ball joints in the new arms. Fullflight recommends blue Loctite on these bolts.

SUZUKI LT250R 1987-1992

02 / Remove the factory arms

Engine off; firm level floor; rated stands and wheel chocks. Start on one side.

- 1 Record the original setup.** Save each factory lower-arm ball-joint retaining bolt for reuse in the new lower arm. Photograph both sides, hose routing and bolt directions. Confirm the ATV year and actual spindle package; keep the other side assembled as an orientation reference.
- 2 Lift and secure.** Loosen wheel nuts while the tires are grounded, then lift at suitable factory points and support the frame on rated stands. Remove the wheel. Never work with jack-only support.
- 3 Support the arm and knuckle.** Support the lower arm without lifting the frame from its stands, and support the knuckle/hub independently so it cannot fall or pull on the brake hose.
- 4 Disconnect steering and brake routing.** Release the tie-rod end and arm-mounted hose clamps as required. If the caliper is removed for access, hang it from the frame with its hose connected. Do not squeeze the lever with the caliper off the disc.
- 5 Unload, then separate.** With the lower arm supported, remove the lower shock mounting connection in the factory sequence. Separate the knuckle joints using the proper tool and retaining-hardware procedure. Protect boots and stud threads.
- 6 Remove pivot hardware.** Withdraw the frame bolts and remove the arms. Label every collar, seal, washer and spacer by location. Inspect the frame tabs, bolts, knuckles and mounting holes before installing replacement parts.

Use the exact-year Suzuki factory manual for lifting points, access and torque. Brake hydraulic work requires its own proper bleeding procedure. No unverified torque value is supplied in this draft.

SUZUKI LT250R 1987-1992

03 / Install the Fullflight kit

Lower decals forward. Upper arms have the longer, straighter leg forward.

- 1 Identify left and right.** Match kit markings, frame fitment and the shock ears. Lower-arm decals face forward; the longer, straighter upper-arm leg is the front leg.
- 2 Prepare the frame pivots.** Check that each Delrin bushing and matched steel sleeve is seated in its correct location. Preserve the specified sleeve lengths, washers and spacers; do not use bolt torque to close a large mounting gap.
- 3 Mount the arms.** Fit the lower arm and matched upper arm in the factory sequence. Start the correct frame hardware by hand and check smooth pivot movement. Do not bend tabs, enlarge holes or force a mismatched sleeve to fit.
- 4 Retain the lower ball joint, then connect the knuckle.** Reuse the factory lower-arm ball-joint retaining bolt to retain the lower ball joint in the new arm. Fullflight recommends blue Loctite on this bolt. Follow the threadlocker application/cure instructions and specified bolt torque. Confirm the knuckle joint/seat and hardware; protect the boots. Fit the matched shock and required retainers.
- 5 Install the steering rods.** Transfer only serviceable matched tie-rod ends, preserving left-hand/right-hand threads and adequate engagement at both ends. Center the steering and set a preliminary straight-ahead position.
- 6 Secure and inspect.** Refit clamps, calipers and guards. Torque structural hardware before loading the tires. Check steering lock and usable bump/droop for binding, contact and hose tension. Repeat on the other side.

Stock-length-shock compatibility applies to the standard ordered configuration. Spindle conversions and special shock options need a matched package. Do not lubricate Teflon-lined heims or sealed joints unless the component instructions require it.

SUZUKI LT250R 1987-1992

04 / Camber and the caster baseline

Set camber before final toe. Measure on the tires at consistent normal ride height.

FIXED FRAME-PIVOT BASELINE

The frame pivots use bushings and sleeves. Keep the correct kit orientation and pivot stack intact.

Focus on camber, then toe using the actual kit adjustment provisions.

CAMBER - FRONT VIEW

Toward vehicle center


Top inward = negative camber

- 1 **Settle and measure.** Equalize side-to-side tire pressures, secure the assembly and roll the ATV to settle it. Hold a straightedge against sound top/bottom rim edges and measure the tilt from vertical.
- 2 **Use a small camber correction.** For the conventional adjustable threaded upper joint, moving the joint inward generally adds negative camber; moving it outward reduces negative camber. Lift and support the ATV before releasing a loaded joint. Make a small recorded change, then reconnect and secure it.
- 3 **Keep the bushing pivots intact.** Do not attempt to adjust a fixed frame-pivot bushing as if it were a threaded heim. Use the kit's confirmed threaded-joint adjustment method and maintain sufficient engagement.
- 4 **Reload and recheck.** Restore the specified torque and retainers before putting weight on the tires. Remeasure both sides at the same ride height. Match measured camber, not just the number of turns. Use the approved camber target for the actual kit and riding setup.

SUZUKI LT250R 1987-1992

05 / Set toe last

Toe is finished at the tie rods after camber and all arm connections are secure.

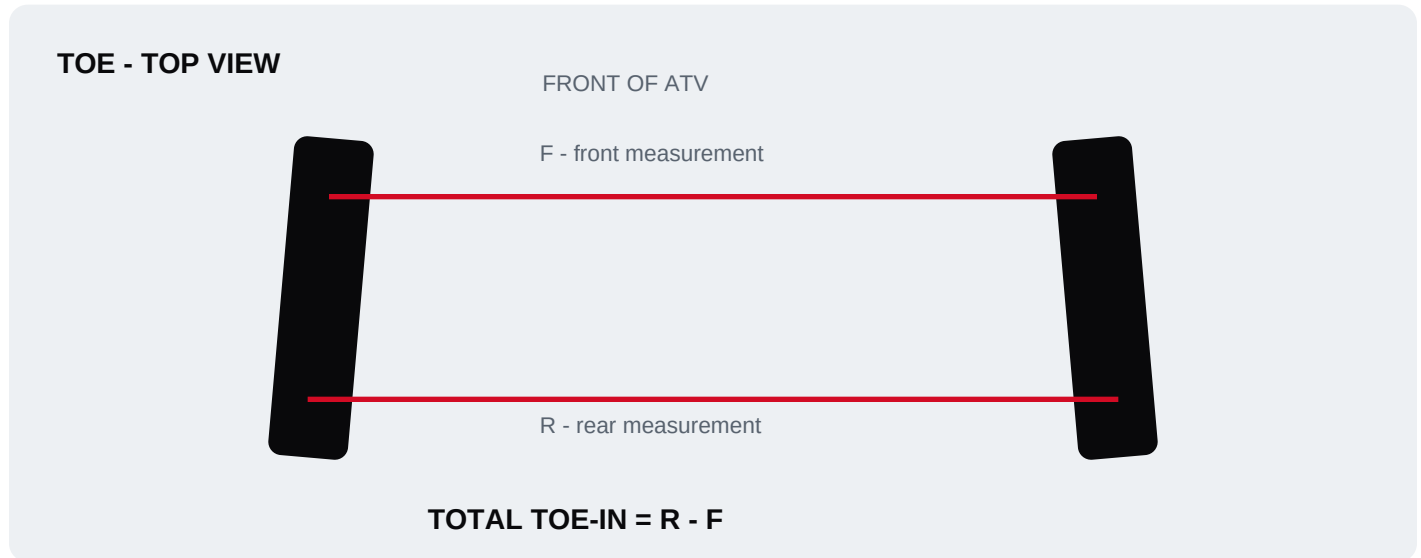

- 1 **Center the steering.** Keep the handlebars straight. Use the same tire pressures and loading as the camber check. Mark repeatable centerlines on the front tires.
- 2 **Measure F and R.** Measure between the same tire marks at axle height at the front. Roll the marks to the rear at the same height and measure again. R greater than F is toe-in; R smaller than F is toe-out.
- 3 **Adjust both rods in small increments.** Preserve steering centering and adequate thread engagement at both ends. Use the matched tie rods rather than forcing a frame-pivot or bushing change.
- 4 **Tighten and remeasure.** Secure the rod jam nuts, settle the suspension again and check F/R. Fullflight's public ATV guide describes equal front/rear measurements; confirm the intended target for this kit before customer release.

Calculation example only: R = 40.000 in and F = 39.875 in gives 0.125 in total toe-in. This is an arithmetic example, not a prescribed toe setting.

SUZUKI LT250R 1987-1992

06 / Final inspection and records

Complete the hardware checks and locking procedure before the first low-speed test.

- ☐ **Factory lower-arm ball-joint retaining bolts reused; blue Loctite applied**
- ☐ **Correct 1987-1992 kit and matched spindle/shock package**
- ☐ **Lower-arm decals forward**
- ☐ **Longer, straighter upper-arm leg forward**
- ☐ **Delrin bushings and matched steel sleeves correctly seated**
- ☐ **Joints, frame pivots, shocks, steering and wheels torqued**
- ☐ **Correct pins/clips and intact boots; free movement and hose clearance**
- ☐ **Camber L/R and final toe F/R recorded**

Record: year/VIN _____ Kit width _____ Spindle type _____
Shock configuration _____ Camber L/R _____ Toe F/R _____
Torque sources / checked _____ Installer / date _____

Lock and test: verify the specified locking compound, application threads, minimum engagement and cure time for the supplied components. After full cure and all checks, test the brakes stationary, then at walking speed off-road. Stop for pulling, clunks or binding; reinspect after the first short ride.

Sources: Fullflight product listing; replacement photograph and factory retaining-bolt / blue Loctite instructions supplied by Fullflight on 13 Oct 2026; Fullflight orientation instructions. Use the exact-year factory service manual for access, replacement fasteners and torque. Numerical camber and hardware torque targets remain subject to verification.

[Fullflight Suzuki LT250R 1987-1992 A-Arms - product source](#)
[Fullflight public installation reference](#)

Pictures identify loose-product features; they are not on-vehicle installation photos. Review draft, revision D8.